



IX405 Main Blower

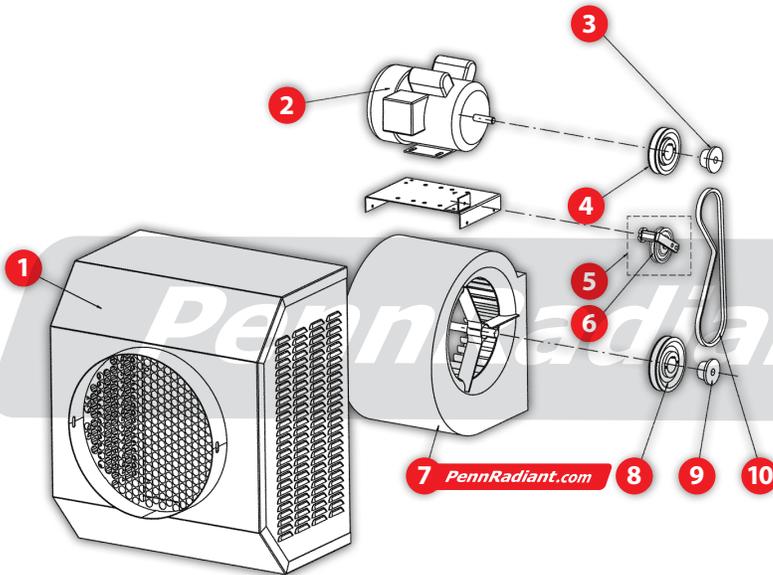


Item	Part #	Description
1	SFP IX-5526	BLOWER SHROUD WELDMENT
2	SFP 1460	MOTOR 1 HP
3	SFP 6133	MOTOR BUSHING SPLIT TAPER
4	SFP 7747	MOTOR SHEAVE
5	SFP IX-5782	BELT TENSIONER ASSEMBLY
6	SFP IX-5784	TENSIONER PULLEY ASSEMBLY
7	SFP 1272	BLOWER ASSEMBLY
8	SFP 1183	BLOWER SHEAVE
9	SFP 7750	BUSHING SPLIT TAPER
10	SFP 1166	BELT
Not Shown		
	SFP 1269	16" WHEEL
	SFP 1278	FAN LIMIT SWITCH
	SFP 1199	OUTPUT LIMIT SWITCH
	SFP 1199	EXHAUST LIMIT SWITCH
	SFP 1199	EXCHANGER LIMIT SWITCH

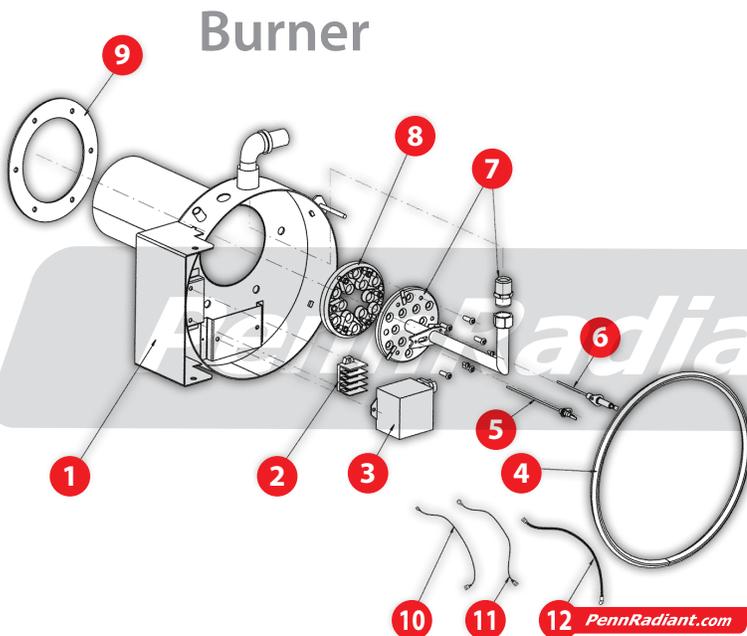


Item	Part #	Description
1	SFP IX-3533	BURNER HOUSING
2	SFP 9823	TERMINAL BLOCK
3	SFP 8676	IGNITION TRANSFORMER
4	SFP 7724	FLEXIBLE SEAL
5	SFP 1305	FLAME ROD
6	SFP 1306	IGNITER
7	SFP IX-3732	BURNER PIPE ASSEMBLY
8	SFP 3157	BURNER HEAD
9	SFP IX-3198	BURNER GASKET
10	SFP WR9RDE-26	FLAME ROD WIRE
11	SFP WR9GER-30	BURNER GROUND WIRE
12	SFP WRIBEX-22	IGNITION WIRE
Not Shown		
	SFP 1276	BURNER MOTOR
	SFP 1274	IMPELLER

IX405 Valve Train

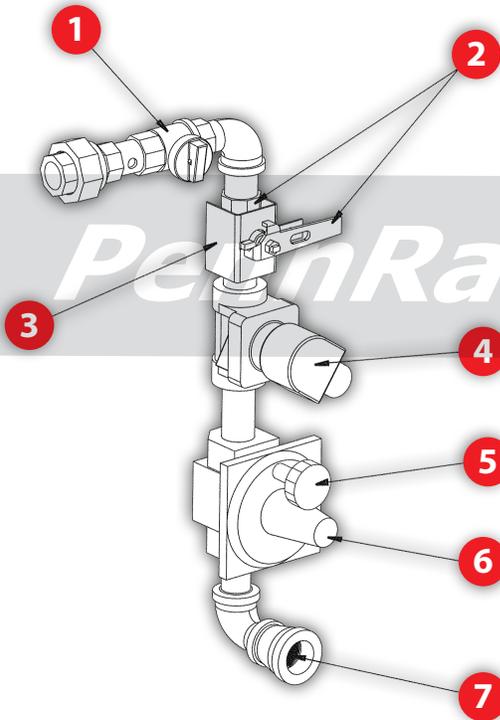

Item	Part #	Description
1	SFP 5869	3/4" MANUAL VALVE
2	SFP IX-3731	GAS SELECTOR VALVE
3	SFP IX-3193	LOCKING BRACKET
4	SFP 4514	3/4" SOLENOID VALVE 24V
5	SFP 9301	VENT PROTECTOR
6	SFP 2524	3/4" REGULATOR
7	SFP IX-3730	STRAINER

Electrical

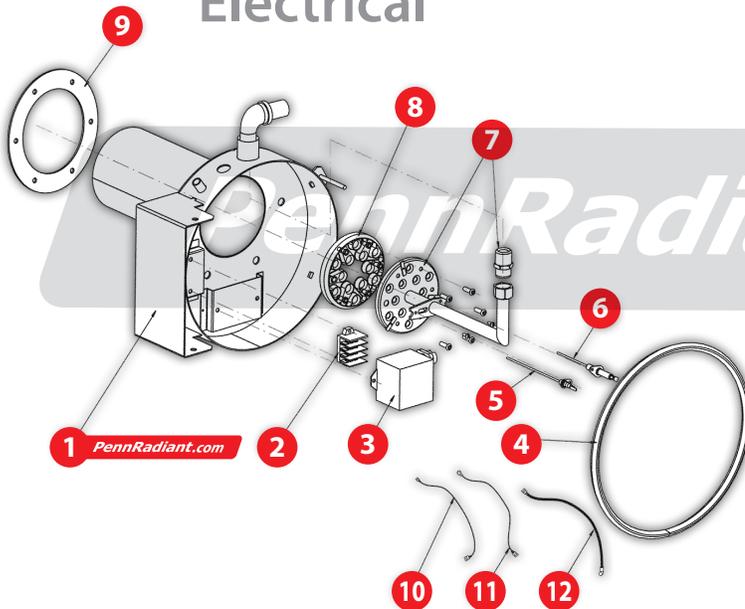

Item	Part #	Description
1	SFP IX-5152	CONTROL BOX LID
2	SFP 9879	START PUSHBUTTON
3	SFP 9880	STOP PUSHBUTTON
4	SFP IX-5734	IX410 ADJUSTED AIR SWITCH
5	SFP 4565	PENDULUM SWITCH
6	SFP SE-4716	THERMOSTAT JUMPER PLUG
7	SFP WRS-172	THERMOSTAT RECEPTACLE
8	SFP 9217	ELECTRIC BOX
9	SFP WRS-165	POWER CORD
10	SFP 1308	IGNITION CONTROLLER
11	SFP 9872	RELAY, 24 VAC
12	SFP 9884	FUSE, 2A
13	SFP 4510	TRANSFORMER
14	SFP 9883	FUSE HOLDER
15	SFP 9823	TERMINAL BLOCK
16	FP 7723	DOOR SEAL (NOT SHOWN)
17	SFP 2453	THERMOSTAT
18	SFP SE-4715	THERMOSTAT ASSEMBLY