


P4000 & P6000 Heater Parts

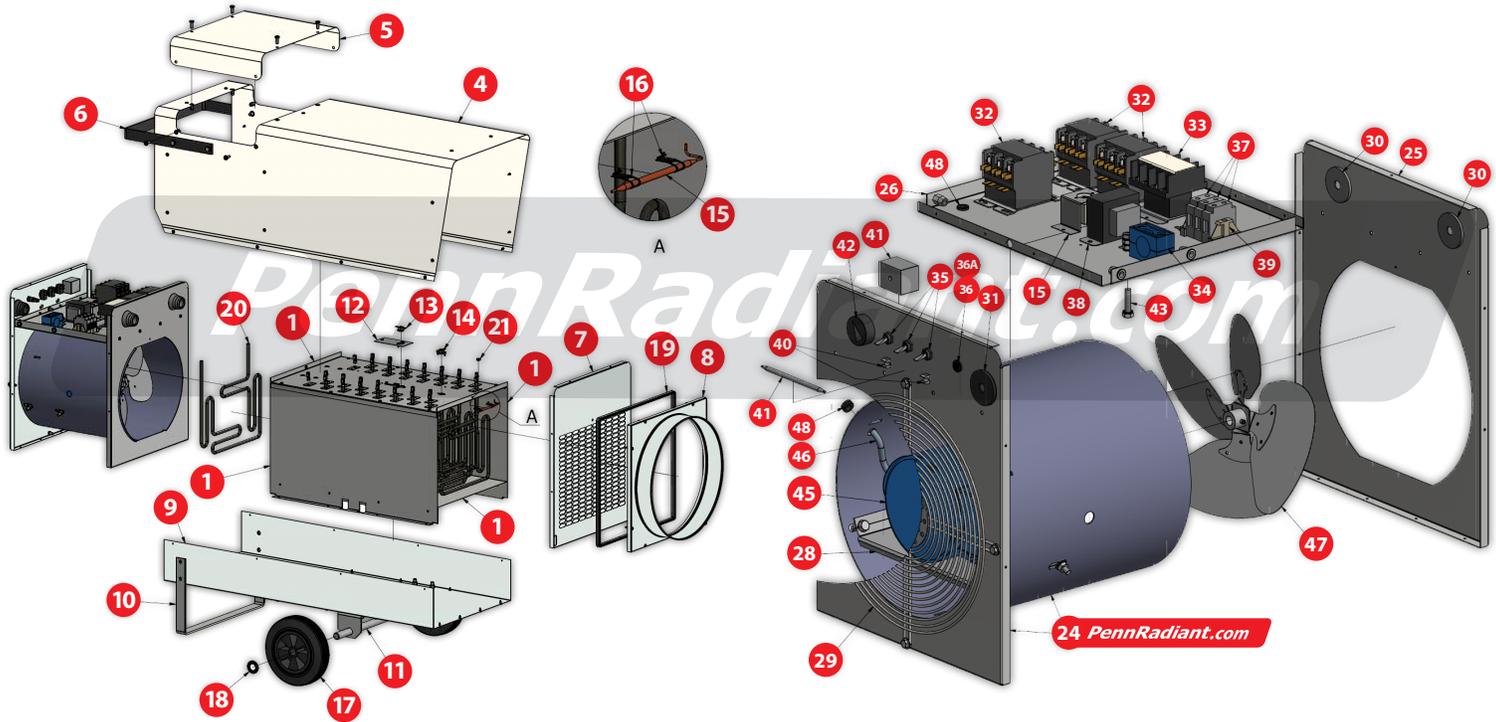

Item	Part #	Description
1	HWP 400003	Heat Exchanger Chamber
4	HWP 400002	Hood (Including Connection Hatch)
5	HWP 400027	Connection Hatch Only
6	HWP 400001	Handle
7	HWP 400006	Front Panel
8	HWP 400008	Duct Adapter
9	HWP 400007	Bottom Frame
10	HWP 400011	Support Leg
11	HWP 400005	Wheel Shaft
12	HWP 400012	Plate, Fan Thermostat
13	HWP 180024	Overheat Limit Switch (Inner)
14	HWP 180025	Cooldown Thermostat
15	HWP 20550	Overheat Limit Switch, Air Outlet (PETE)
16	HWP 82770	Metal Bracket, or Bulb
17	HWP 400004	Wheel
18	HWP 74600	Locking Washer
19	HWP 40019	Gasket, Rubber
20	HWP 400026	Heating Element (15 Per Heater, P4000)
21	HWP 600026	Heating Element (15 Per Heater, P6000)
21	HWP 36809	Guard Ring, Rubber
24	HWP 400015	Rear Panel
25	HWP 400009	Partition Panel / Bracket
26	HWP 400010	Contactors Mounting Plate
28	HWP 40028	Mounting Plate, Fan Motor
29	HWP 400019	Fan Guard Grill
30	HWP 400020	Bushing, Medium
31	HWP 400016	Bushing, large

Item	Part #	Description
32	HWP 22669	Contactors (3 Per Heater)*
33	HWP 400022	Contactors (1 Per Heater)
34	HWP 180016	Strain Reliever (Qty 2)
	HWP 36904	Strain Reliever (P6000 only)
35	HWP 400021	Toggle Switch
36	HWP 38110	Fuse Holder
36A	HWP PEF1	Fuse
37	HWP 36615	Terminal Block (3 per heater)
38	HWP 28400	Transformer \$93.00
39	HWP 36616	Locking Clamp + End Plate \$7.50
40	HWP 37910	Plastic Bracket \$3.00
41	HWP 180017	Ambient Thermostat \$69.00
41	HWP 20220	Ambient Thermostat (Knob Not Included) For P4000, S/N 2022 & Beyond For P6000, S/N 0531 & Beyond
42	HWP 400018	Thermostat Knob (for 180017)
42	HWP 20577	Thermostat Knob (for 20220)
43	HWP 400043	Ground Bolt
45	HWP 400014	Fan Motor
47	HWP 400012	Fan Blade
48	HWP 36802	Bushing, Small
Not Shown		
	ACC WD1425	Duct for P4000, P6000 (14"x25' long)
	SFP S1500-105	Bracket for Terminal Block
	HWP 32116	Heating Coil Wire (sold by foot)

* For P4000 S/N prior to 2142 use 400022
For P6000 S/N prior to 0561 use 400022