


S1505B Heater Parts

Serial #3237 through #4276

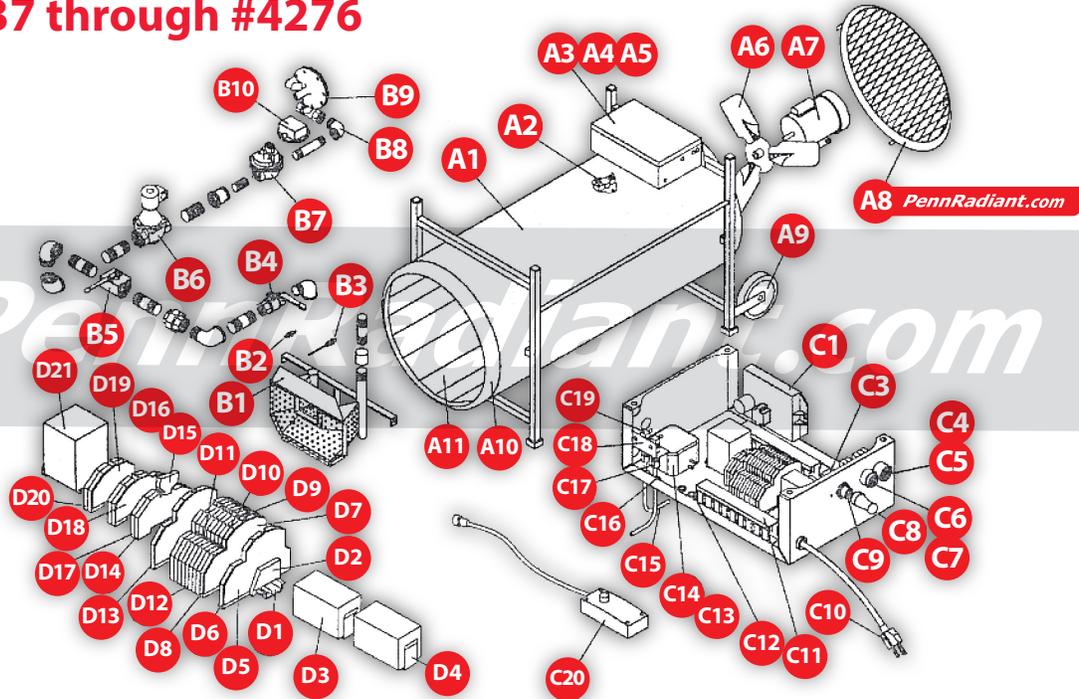


Item	Part #	Description	Item	Part #	Description
A1	SFP S1505-56	Heater Body (Includes A10 & A11)	C12	SFP 5509	Snap Bushing, 1/2"
A2	SFP 2446	Limit Switch, 180F	C13	SFP S1500-710	Adjusted Air Switch
A3	SFP S1500-104	Control Box Lid	C14	SFP 9294	Vinyl Tube, 3/16"
A4	SFP S1500-501	Control Box	C15	SFP S1500-109	Air Tube
A5	SFP 7723	Control Box Seal	C16	SFP 5515	Rubber Grommet
A6	SFP 2423	Fan Blade	C17	SFP 2554	Compression Fitting, 1/4" Tubex 1/8" MNPT
A7	SFP 9262	Motor, 1HP	C18	SFP S1500-502	Air Tube Bracket
A8	SFP SL11	B-53 Screen	C19	SFP 9293	Connector, 1/8" MNPT x .170" HB 90° Elbow
A9	SFP 6119	Wheel	C20	SFP S1500-716	Remote Thermostat Assembly W/Cable
A10	SFP SL11B-13	Nose Cone	D1	SFP S1500-105	Mounting Rail
A11	SFP SL11B-2	Heat Shield	D2	SFP 9443	Ground Terminal Block (WK 4SL/U) Green/Yellow
B1	SFP BV85-50	Burner	D3	SFP 9264	Power Relay, 120V
B2	SFP 2143	Spark Plug	D4	SFP 9264C	Relay Clip
B3	SFP SL11B-86	Flame Rod	D5	SFP 9280	End Plate (APC 1-2.5 D2/E), Green
B4	SFP 2539	Maunal Shut-Off Valve, 1-1/2"	D6	SFP 9275	Terminal Block (WKC 2.5 D2/2 SL35), Green
B5	SFP S1505-81	Gas Selector Valve, 1-1/2"	D7	SFP 9279	End Plate (APC 1-2.5 D2/E), Gray
B6	SFP 2537	Solenoid Valve, 1-1/2"	D8	SFP 9277	Terminal Block (WKC 2.5 E/35), Red
B7	SFP 4490	2-Stage Regulator, 1-1/4"	D9	SFP 9283	Gross Connector, 2 Pole
B8	SFP S1500-86B	Strainer Assembly, 1-1/4"	D10	SFP 9284	Gross Connector, 3 Pole
B9	ACC 11SV08	Regulator (optional)	D11	SFP 9285	Gross Connector, 5 Pole
B10	SFP 4509	Gas Pressure Switch	D12	SFP 9276	Terminal Block (WKC 2.5E), Gray
C1	SFP 9624	Flame Controller (Pin Connector)	D13	SFP 9274	Terminal Block (WKC 2.5 D2/2 SL35), Gray
	HWP HC1001D	Flame Controller (Tab 1/4")	D14	SFP 9278	Terminal Block (WKC 2.5 TKG/35), Gray
C3	SFP S1500-108	Wiring Duct	D15	SFP 9271	Fuse Holder
C4	SFP 9612 Start	Button Assembly	D16	SFP 9270	Fuse, 2A
C5	SFP S1500-718	Start Contact Block Assembly	D17	SFP 9273	Terminal Block (WKC 2.5 D1/2/3.5), Gray
C6	SFP 9611 Stop	Button Assembly	D18	SFP 9281	End Plate (APC 1-2.5 D1/TK), Gray
C7	SFP S1500-717	Stop Contact Block Assembly	D19	SFP 9282	End Plate (APC 1-2.5, Gray
C8	SFP 8686	Thermostat Jumper Assembly	D20	SFP 9272	Terminal Block (WKC 2.5/35), Gray
C9	SFP 8682	Thermostat Receptacle	D21	SFP 8659	Utility Box
C10	SFP 3868	Power Cord, 24"			
C11	SFP S1500-107	Wiring Duct, 7"			
			Parts Not Shown		
			SFP HC1008		Ignition/Flame Sensor Wire Kit

S1505B

Heater Parts

Serial #4278 and Beyond

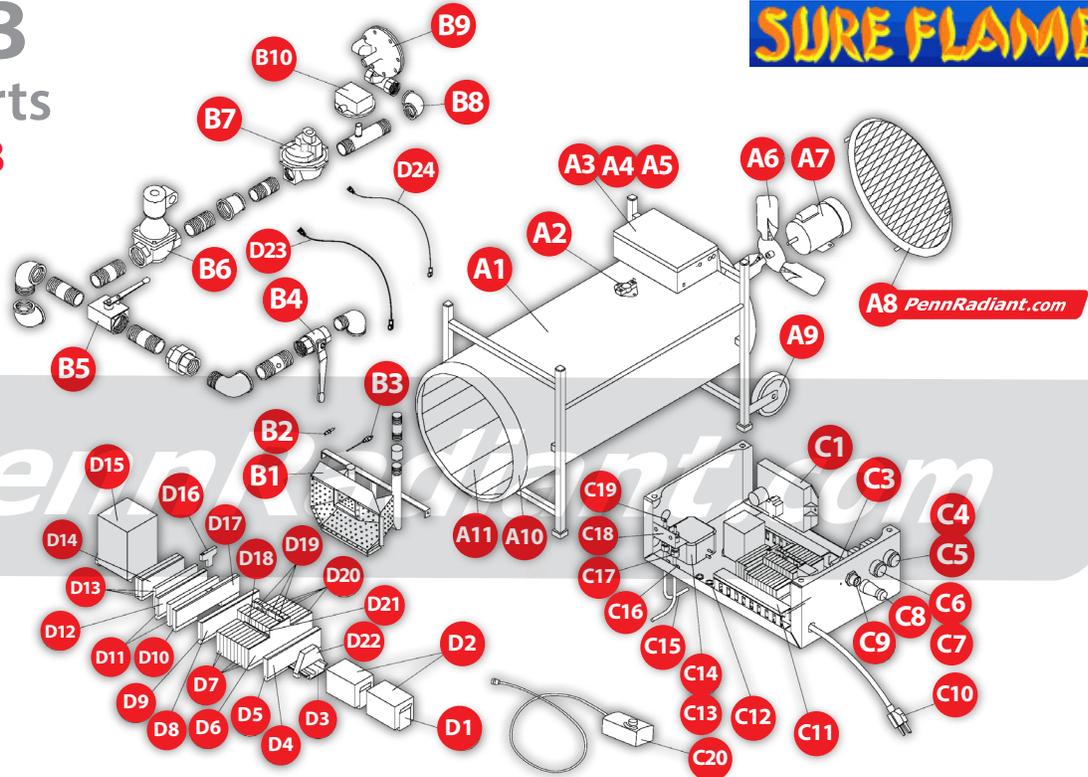

Item	Part #	Description	Item	Part #	Description
A1	SFP S1505-56	Heater Body (Includes A10 & A11)	C13	SFP S1500-710	Adjusted Air Switch
A2	SFP 2446	Limit Switch, 180F	C14	SFP 1707	Silicone Tube, 3/16"
A3	SFP S1500-104	Control Box Lid	C15	SFP S1500-109	Air Tube
A4	SFP S1500-501	Control Box	C16	SFP 5515	Rubber Grommet
A5	SFP 7723	Control Box Seal	C17	SFP 2554	Compression Fitting, 1/4" Tubex 1/8" MNPT
A6	SFP 2423	Fan Blade	C18	SFP S1500-502	Air Tube Bracket
A7	SFP 9262	Motor, 1HP	C19	SFP 9293	Connector, 1/8" MNPT x .170" HB 90° Elbow
A8	SFP SL11B-53 S	screen	C20	SFP S1500-716	Remote Thermostat Assembly W/Cable
A9	SFP 6119	Wheel	D1	SFP 9264C	Relay Holder Clip
A10	SFP SL11B-13	Nose Cone	D2	SFP 9264	Relay
A11	SFP SL11B-2	Heat Shield	D3	SFP S1500-105	DIN Mounting Rail
B1	SFP BV85-50	Burner	D4	SFP 4655	End Plate for 4668
B2	SFP 2143	Spark Plug	D5	SFP 4668	Ground Terminal Block (gray)
B3	SFP SL11B-86	Flame Rod	D6	SFP 4654	End Plate for 4528
B4	SFP 2539	Manual Shut-Off Valve, 1-1/2"	D7	SFP 4658	Terminal Block 2P+2P (gray)
B5	SFP S1505-81	Gas Selector Valve, 1-1/2"	D8	SFP 4657	End Plate for 4669
B6	SFP 2537	Solenoid Valve, 1-1/2"	D9	SFP 4669	Terminal Block 4P (gray)
B7	SFP 4490	2-Stage Regulator, 1-1/4"	D10	SFP 4527	Fused Terminal Block (gray)
B8	SFP S1500-86	Strainer Assembly, 1-1/4"	D11	SFP 4529	Terminal Block 3P (gray)
B9	ACC 11SV08*	Regulator (optional)	D12	SFP 4524	End Plate for 4529
B10	SFP 4509	Gas Pressure Switch	D13	SFP 4530	Terminal Block 2P (gray)
C1	HWP HC1001D	Flame Controller (Tab 1/4")	D14	SFP 4525	End Plate for 4530
C3	SFP S1500-108	Wiring Duct	D15	SFP 4659	Utility Box
C4	SFP 9612	Start Button Assembly	D16	SFP 9270	Fuse, 2A
C5	SFP S1500-718	Start Contact Block Assembly	D17	SFP 9271	Fuse Holder
C6	SFP 9611	Stop Button Assembly	D18	SFP 4526	End Plate for 4527
C7	SFP S1500-717	Stop Contact Block Assembly	D19	SFP 4622	Jumper 5 Pole
C8	SFP S1500-713	Thermostat Jumper Assembly	D20	SFP 4523	Jumper 2 Pole
C9	SFP 8682	Thermostat Receptacle	D21	SFP 4528	Terminal Block w/Light 2P+2P (red)
C10	SFP 3868	Power Cord, 24"	D22	SFP 4652	Jumper 3 Pole
C11	SFP S1500-107	Wiring Duct, 7"	D23	SFP 9443	Ground Terminal Block (green/yellow)
C12	SFP 5509	Snap Bushing, 1/2"	D24	WR4IEX-60	Ignition Wire
				WR7BAY-66	Flame Rod Wire